


EPIRB usage

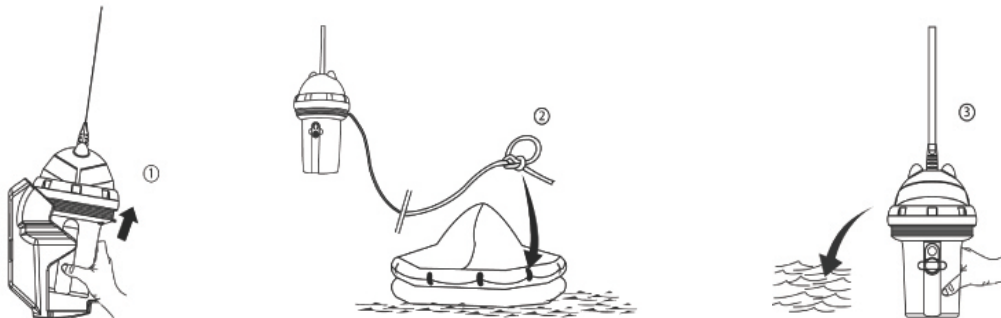

Using the EPIRB

1. Undo EPIRB from under cockpit seat
2. Break seal by sliding locking system up
3. Press ON button
 - a. Buzzer transmits audible signal every second
 - b. Beacon starts with 19 second self-test (succession of white flash + red blinkings)
 - c. After self-test only white flash blinks every 3 seconds. Buzzer transmits every second
4. Tie EPIRB to liferaft or rescue boat with yellow lanyard
5. Launch EPIRB overboard.



Testing EPIRB

1. Press the TEST / READY button during 1 second
2. Test lasts 23 seconds. Verify result:
 - a. 5 x 1 red flash (*-*-*-*) = ok
 - b. 5 x 2 red flashes (**-**-**-**-**) = fault

False alarm

1. Immediately contact nearest SAR authority. Report false alarm on EPIRB with following information:
 - a. HEX code: xxxxxxxxxxxxxx
 - b. Time and duration of alarm
 - c. Location when activated
2. Manually de-activate EPIRB by pressing the TEST / READY button